


# Dornbracht Montageanleitung

Installation instructions  
Montagehandleiding  
Instructions de montage  
Istruzioni di montaggio  
Instrucciones de montaje  
Installation instructions  
Monteringsanvisning  
Montážní návod  
Instrukcja montażu  
Инструкция по монтажу  
安装指导

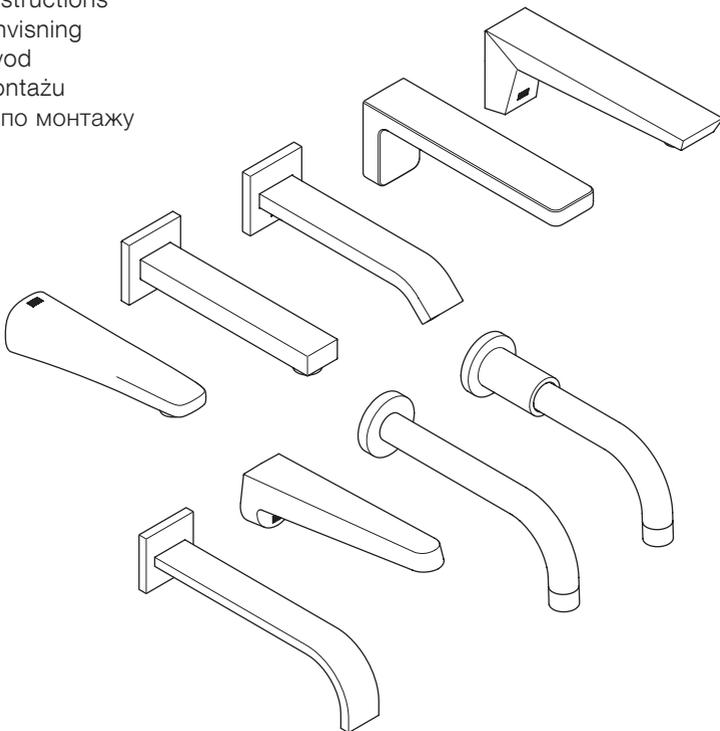


13 800 720-FF / 13 800 980-FF / 13 800 980-FF 0010 / 13 801 670-FF / 13 801 710-FF /  
13 801 720-FF / 13 801 730-FF / 13 801 780-FF / 13 801 782-FF / 13 801 840-FF /  
13 801 885-FF / 13 801 892-FF / 13 801 980-FF / 13 805 980-FF / 13 805 980-FF 0010



**Lieferumfang** // Parts supplied // Omvang van de levering // Pièces livrées // Entità di fornitura // Volumen de suministro // Parts Supplied // Leveransomfang // Rozsah dodávky // Zakres dostawy // Объем поставки // 供货范围


13 801 670-FF

**A**

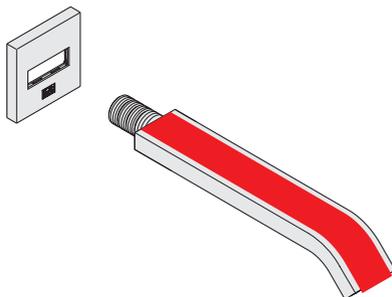


13 801 710-FF

**C**

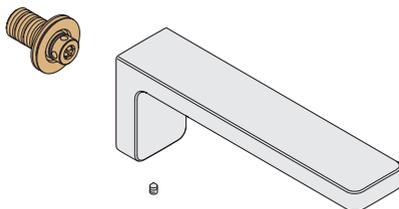

13 800 720-FF / 13 801 720-FF

**B**

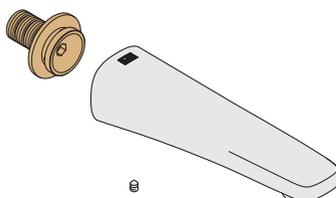

**Lieferumfang** // Parts supplied // Omvang van de levering // Pièces livrées // Entità di fornitura // Volumen de suministro // Parts Supplied // Leveransomfang // Rozsah dodávky // Zakres dostawy // Объем поставки // 供货范围


13 801 730-FF

**C**



13 801 780-FF / 13 801 782-FF

**A**

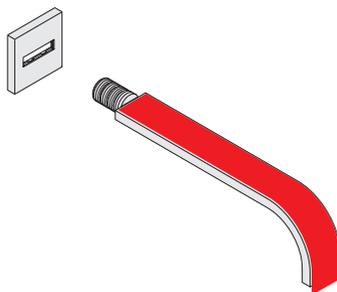

13 801 840-FF

**C**



**Lieferumfang** // Parts supplied // Omvang van de levering // Pièces livrées // Entità di fornitura // Volumen de suministro // Parts Supplied // Leveransomfang // Rozsah dodávky // Zakres dostawy // Объем поставки // 供货范围


13 801 885-FF

**D**




13 801 892-FF

**D**

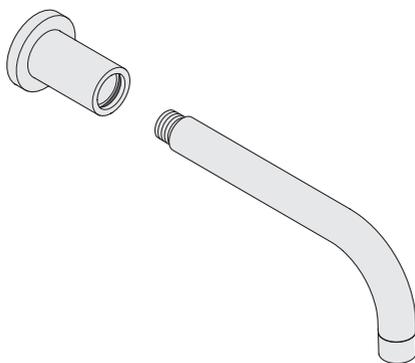


13 800 980-FF / 13 800 980-FF 0010 / 13 801 980-FF /  
13 805 980-FF / 13 805 980-FF 0010

**E**

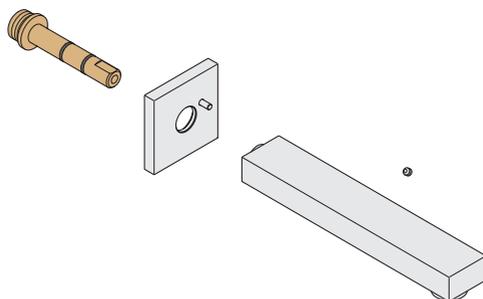

**Planungshinweis** // Planning note // Aanwijzing m.b.t. de planning // Indication de réalisation // Indicazione per la progettazione // Indicación de planificación // Planning note // Planeringsanvisning // Pokyn k plánování // Wskazówka dla projektowania // Указание по планированию // 规划说明

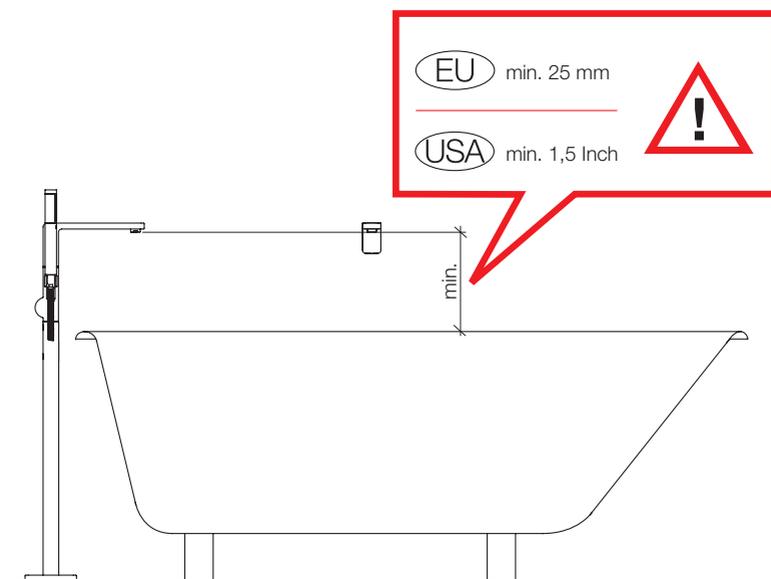




1



2

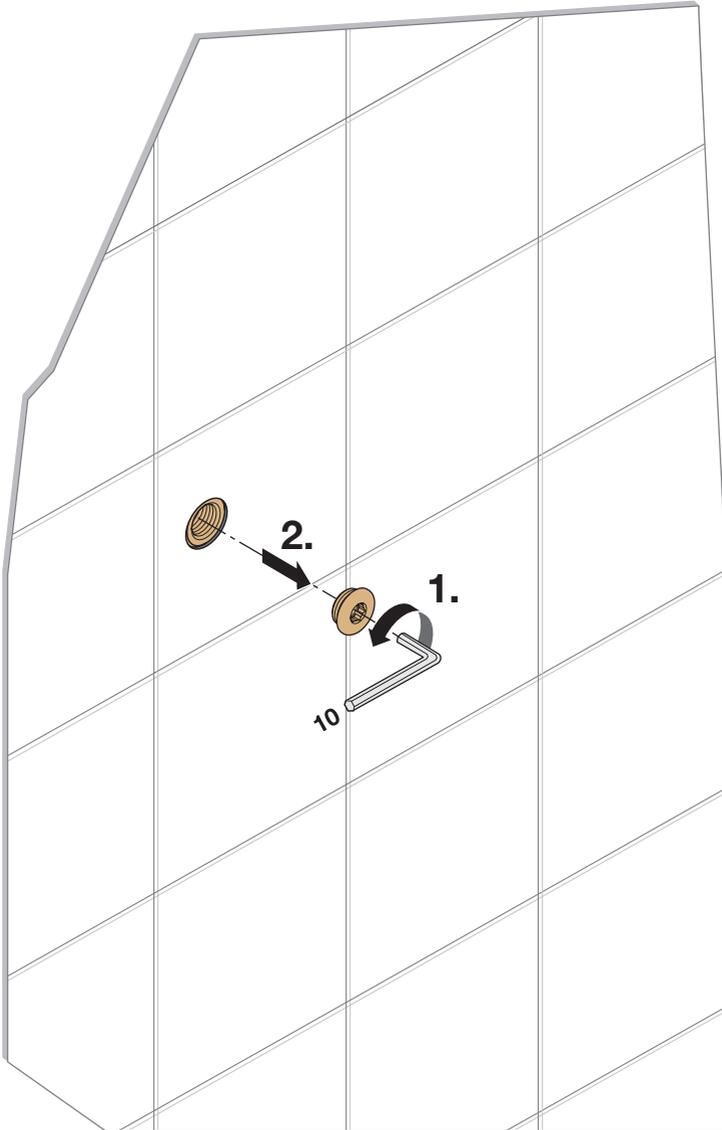




**3**

**A**



13 801 670-FF / 13 801 780-FF /  
13 801 782-FF

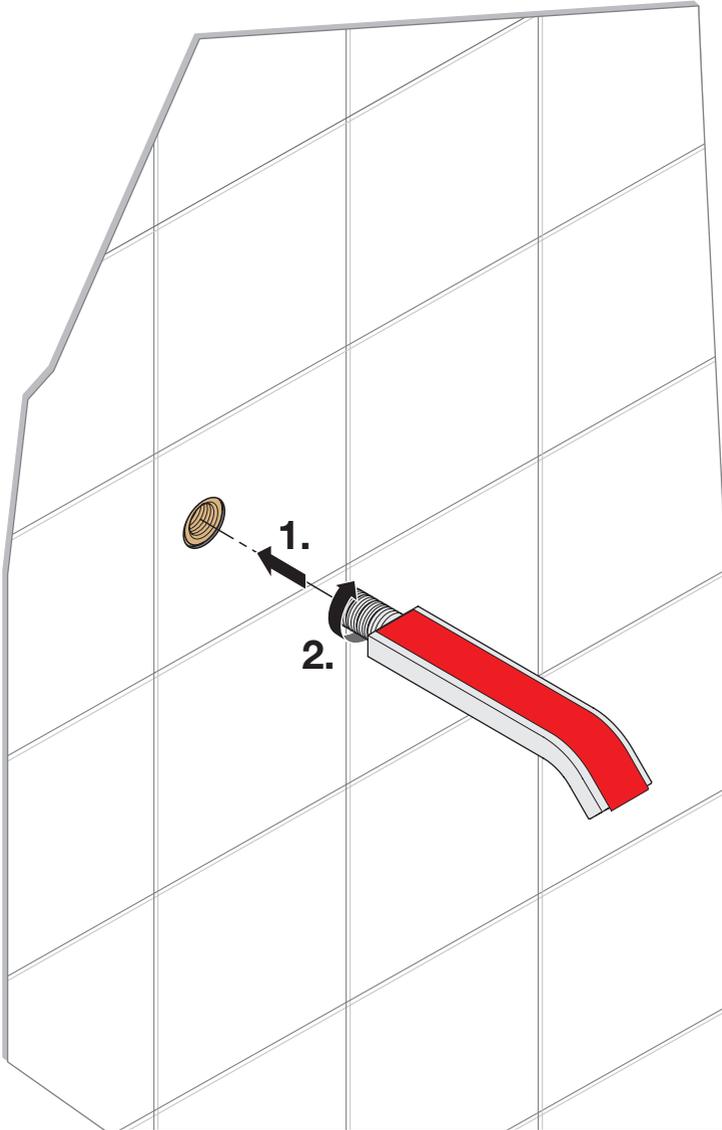

# 4

A


13 801 670-FF / 13 801 780-FF /  
13 801 782-FF

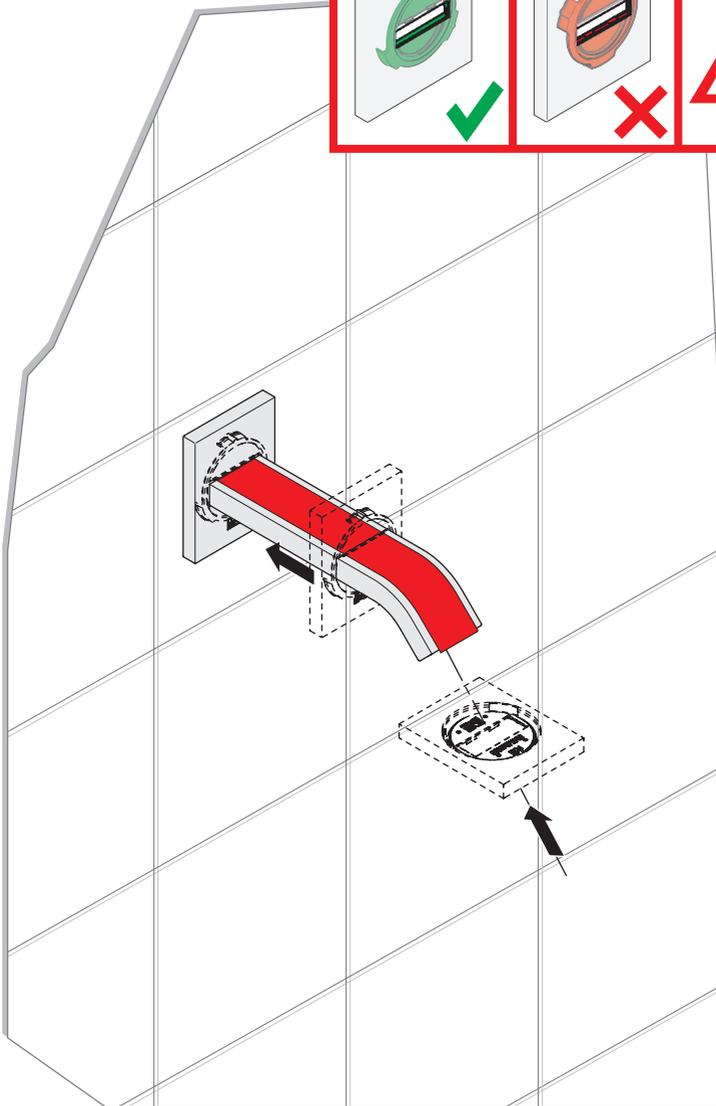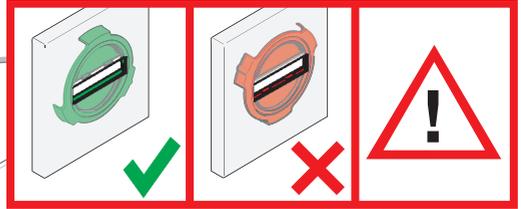



**5**  
**A**

13 801 670-FF / 13 801 780-FF /  
13 801 782-FF

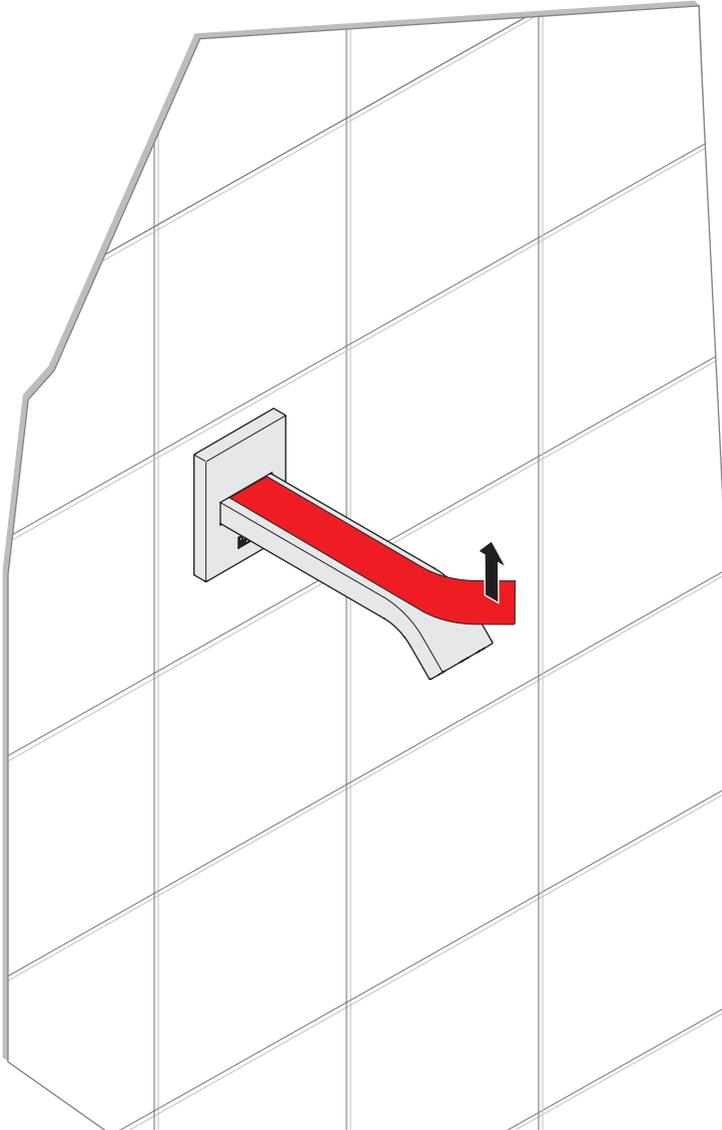


# 3


---

## B




13 800 720-FF / 13 801 720-FF

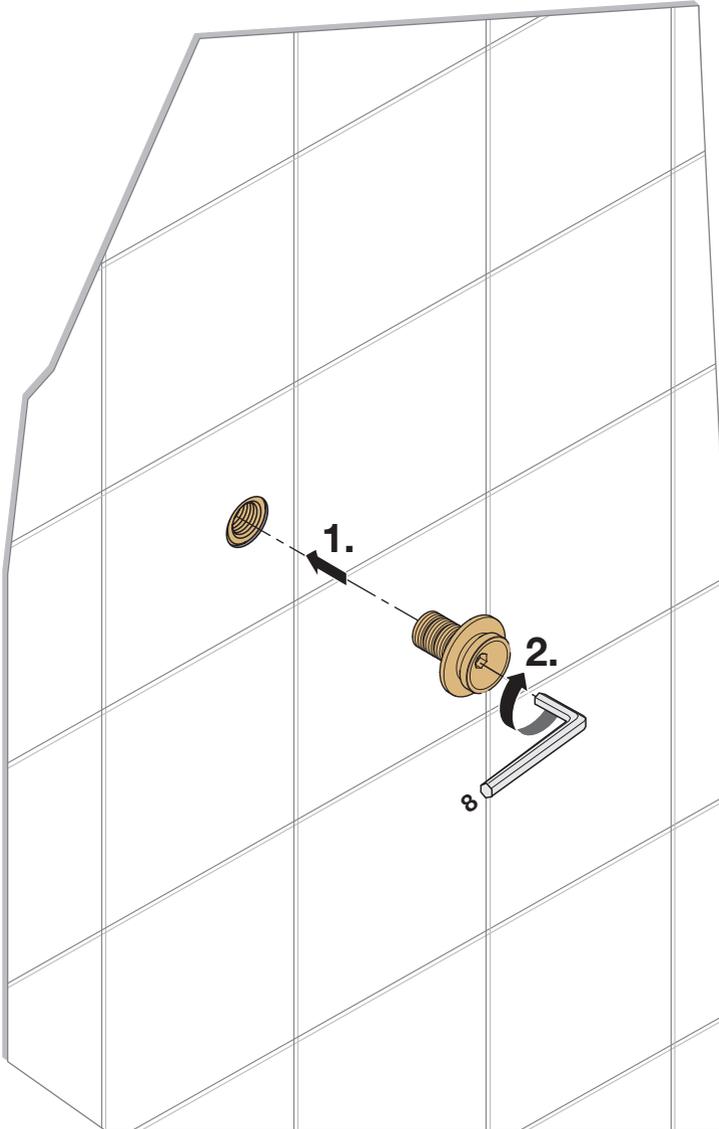

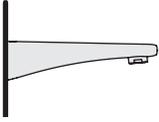


13 800 720-FF / 13 801 720-FF

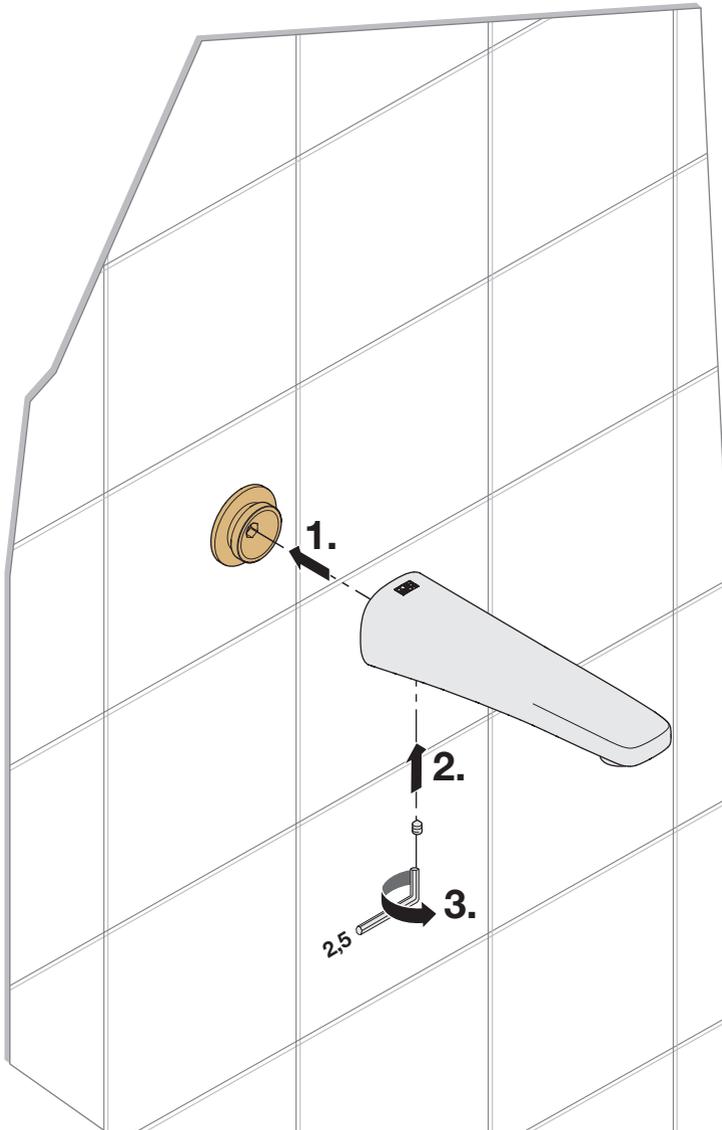


# 3

C




13 801 710-FF / 13 801 730-FF /  
13 801 840-FF

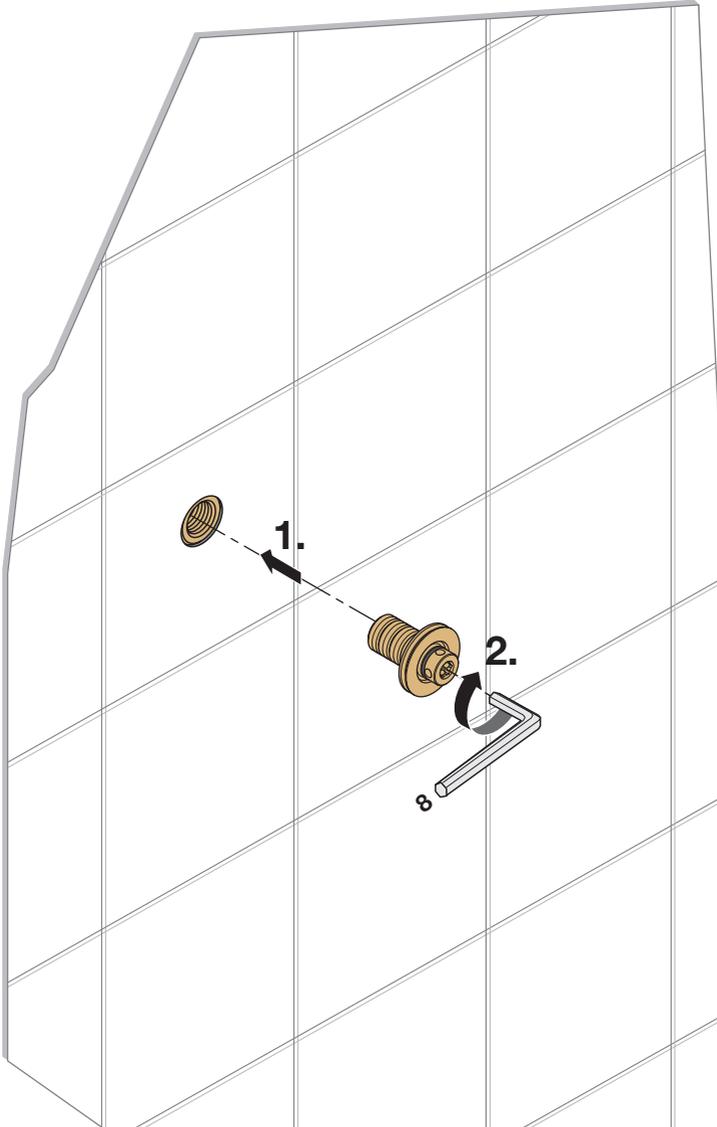



13 801 710-FF / 13 801 730-FF /  
13 801 840-FF

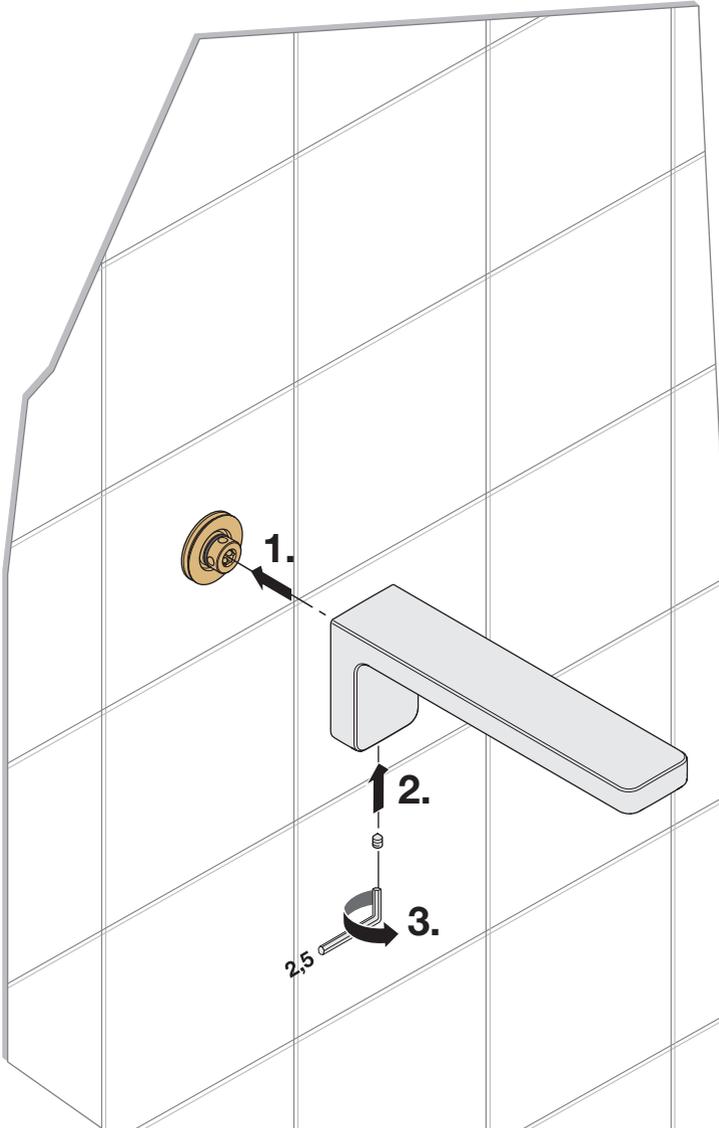



# 3

D




13 801 885-FF / 13 801 892-FF

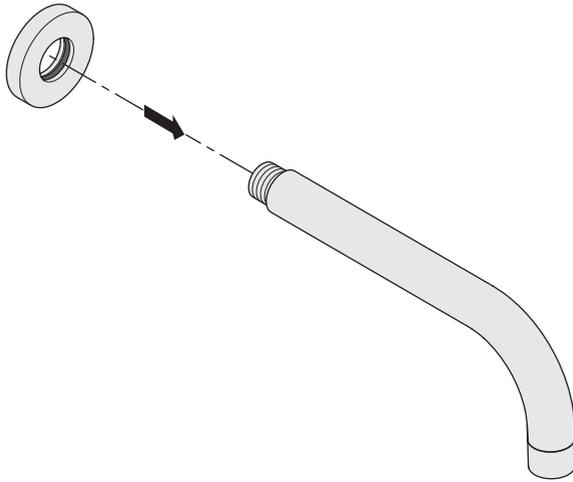

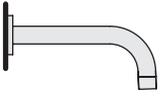

13 801 885-FF / 13 801 892-FF

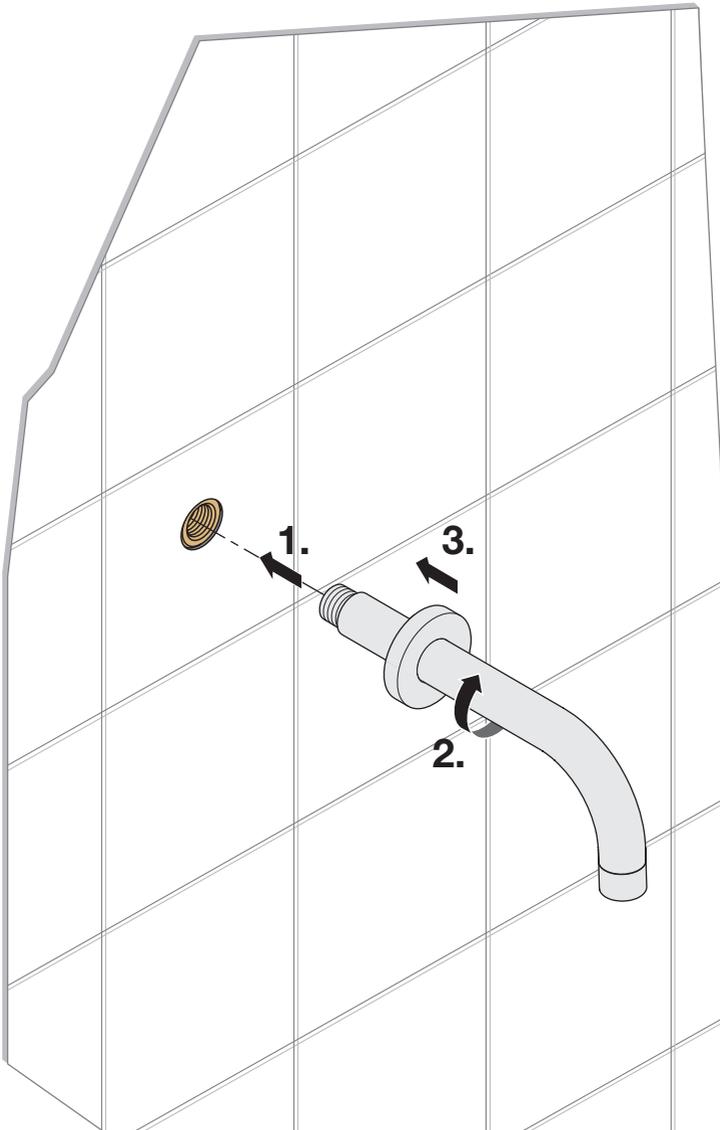


# 3

## E




13 800 980-FF / 13 800 980-FF 0010 /  
13 801 980-FF / 13 805 980-FF /  
13 805 980-FF 0010

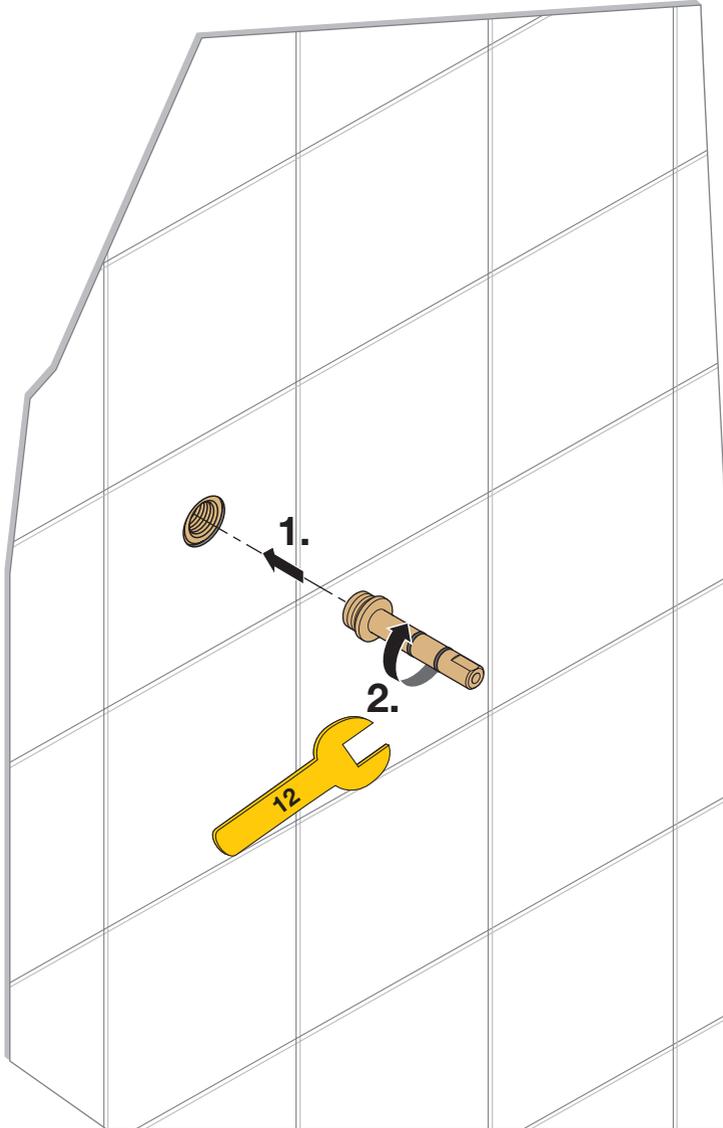




**4**  
**E**

13 800 980-FF / 13 800 980-FF 0010 /  
13 801 980-FF / 13 805 980-FF /  
13 805 980-FF 0010

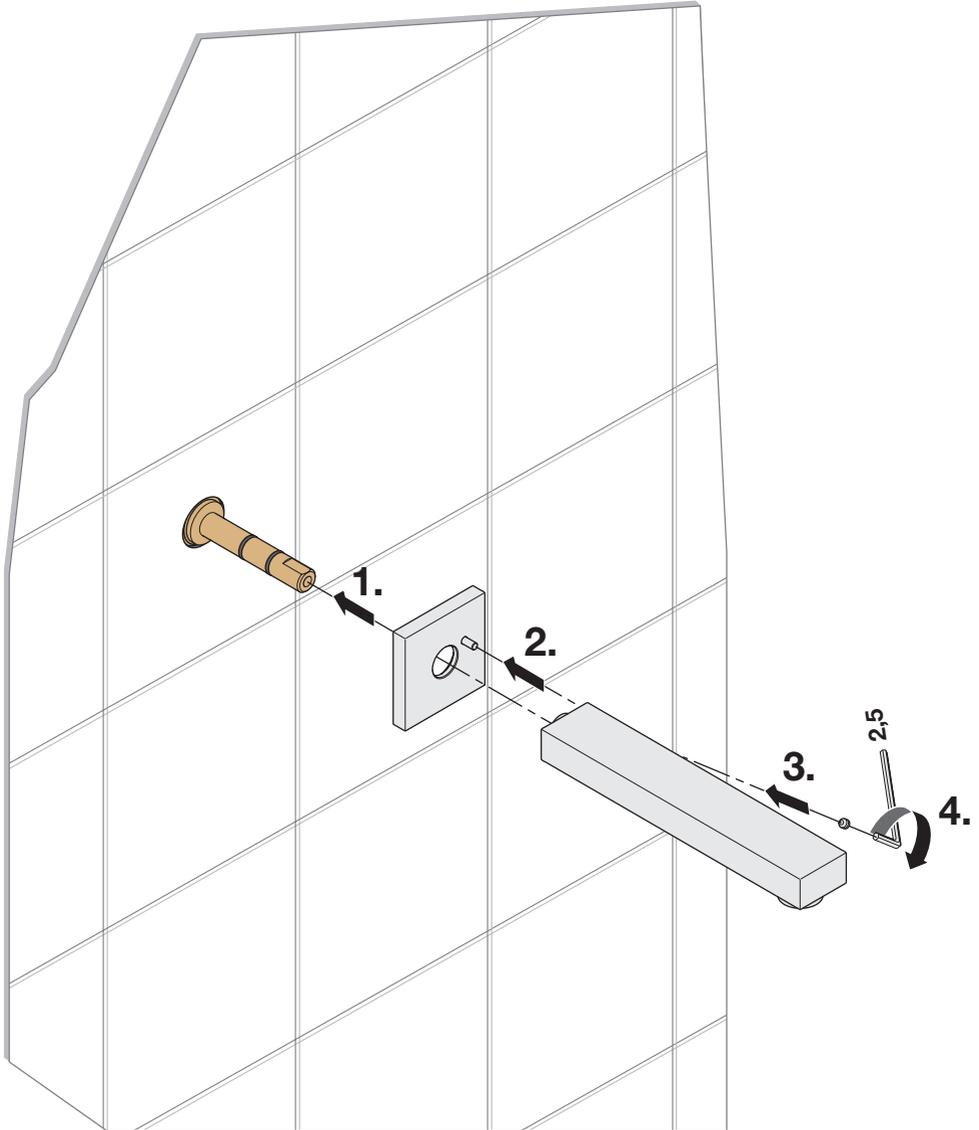


13 800 720-FF

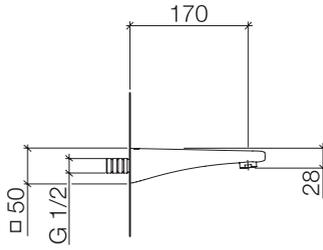


mm

13 800 980-FF / 13 800 980-FF 0010

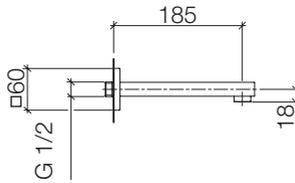

mm


13 801 670-FF

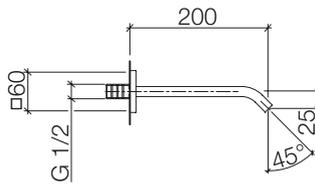

mm


Inch = mm x 0,0394

13 801 710-FF

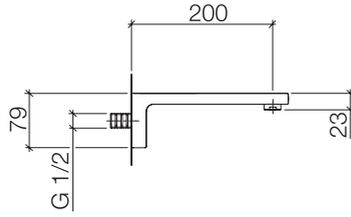


mm

13 801 720-FF

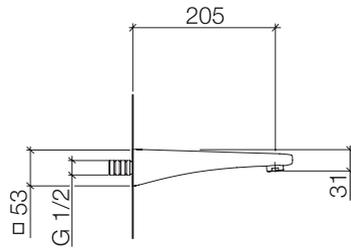

mm


13 801 730-FF

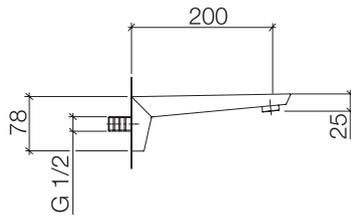

mm


Inch = mm x 0,0394

13 801 780-FF

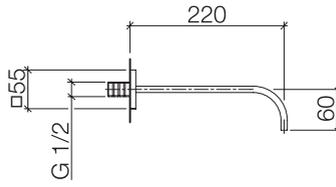


mm

13 801 840-FF

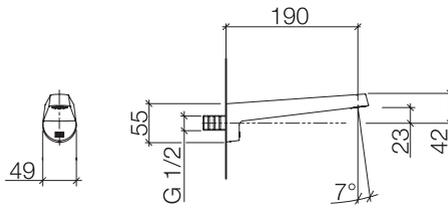

mm


13 801 885-FF

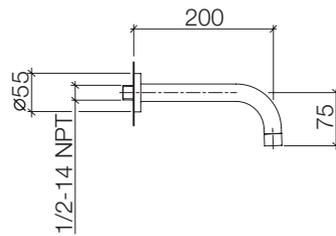

mm


Inch = mm x 0,0394

13 801 892-FF

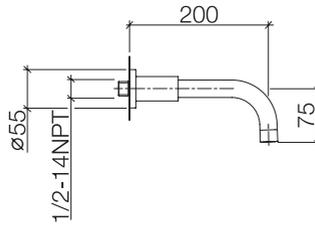


mm

13 801 980-FF

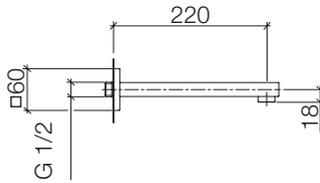

mm

13 805 980-FF / 13 805 980-FF 0010

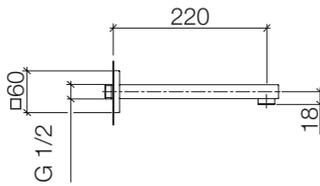

mm

Inch = mm x 0,0394

Aloys F. Dornbracht GmbH & Co. KG Armaturenfabrik  
Köbbingser Mühle 6, D-58640 Iserlohn  
Tel. +49(0)237 1433-0, Fax +49(0)237 1433-232  
mail@dornbracht.de, dornbracht.com

## Dornbracht Group

Premium Solutions for Interior Architecture



01 03 26 000 00 / 02.2019